Installation instructions for Franke faucet with spray or swing spout



Design. These faucets are available in chrome chrome-brass satin-nickel and satin-nickel/brass to match Franke sink accessories. The elegant rising shout has a high clearance from sinkton level giving plenty of room to fill or wash nots. This clearance is particularly important with accessorized sinks where the accessories bring the bowl to counterton level when in use

=== Care of finish. These faucets have been carefully manufactured. The chrome chrome-brase satio-nickel and satin-nickel/brass surfaces will maintain their conegrance for a long time, provided they are cleaned using a soft cloth, water and soon, NEVER use an abrasive cleanser (liquid or nowder) or any scouring and on this faucet

MMM Technical data


Maximum water pressure: 75 PCI Maximum hat water temperature: 175° F Recommended hot water temperature: 150° F Tailnine connections: 3/8" O D

for a period of five (5) years from the date of purchase. The flexible hose is warranted for two (2) years from the date

of purchase.

- This warranty applies only to the original owner. providing the product has been installed in accordance with our installation instructions, used as recommended and in a normal residential application. In the event of a warranty claim, the owner will be required to provide proof of purchase. This warranty covers all components which make the product operational. Franke, at its option, may repair or replace the product or components necessary to restore the product to good working condition. Franke reserves the right to inspect the installation prior to the actual replacement of the product or component part.
- ■■■ This warranty does not cover misuse or abuse. accidental damages, scuffs or scratches improper installation, abnormal usage, negligence or damage caused by improper maintenance or cleaning. Normal wear of parts is excluded from warranty. Damage caused by impurities or acts beyond our control are not covered Any product or part which has been repaired or altered in any manner outside of Franke's factory, unless previously authorised in writing by Franke, will void warranty. Any replacement excludes transportation and any labor reinstallation costs. This warranty does not allow recovery of incidental or consequential damages such as loss of use, delay, property damage or other consequential damage. and Franke accepts no liability for such damages.
- ■■■ The Franke warranty is limited to the above conditions and to the warranty period specified herein and is exclusive. Franke DISCLAIMS all other warranties, expressed or implied, including the IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE. This warranty gives you specific legal rights which may vary from state to state

■■■ Replacement parts for side lever sink mixer, long spout

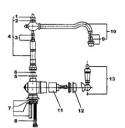

Pos. PART NAME

1. Nut 2. Colu

3

10

11

12.

13

10

11

12

13

14

15

16

17

Nut
Column top ring
ORings
Spout column complete

5. Column base ring
6. Column seal
7. Fixation set
8. Inlet flexible hase

Aerator complete Spout complete Ceram.disc cartridge Metal cap Lever complete Part #

OEN51163


OEN51162 OE00100NT910 OE00100300

OE00100300 OEN51147 OE09221JC OE00100NT904 OE533001

OE09659ASA OE0608003 OE00100111

OE0100400

■■■ Replacement parts for side lever sink mixer, pullout spray

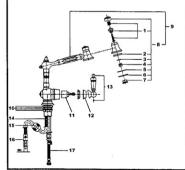

Pos. PART NAME

Diverter
Fiber seal
Flat seal
Aerator
Flat seal
Shower screen

Aerator ring
Diverter complete
Spray head complete
Fixation set
Ceram.disc cartridge

Lever complete
Flexible hose
Counterweight
Fitting
Inlet flexible hose

Metal can

Part

OE09218 JC OE09687AS OE09226 JC OE0801306 OEN51202 OE00100603 OE00100600

OE00100NT602

OE00100600 OE7617 OE09659ASA OE0608003 OE00100111 OE5661 OE09834DI

OE5661 OE09834DI OE2208004 OEN6620 ■■■ Attention. <u>Before</u> installing the faucet SUPPLY LINES MUST BE FLUSHED to remove scale, solder or other impurities and prevent them from entering the faucet.

■■■ Installation (spout model)



- Screw spout assembly (8) onto the body (10), being between its two stops.
- Position the rubber seal (1) between the body and the sink-top.
- 3) Fit the fiber seal (2), washer (3) and nut (4) and tighten.
- flexible pipes (5), with

Replacement of "O" ring seals in the column (spout model), see figure 1:

- 1) loosen the cap nut (6) using a 20 mm spanner
- 2) lift off the washer and the swiwel spout (7)
- replace the 2 "O" ring seals and grease them
 refit the swivel spout, the washer and the cap nut and tighten it

■■■ Installation (spray head model)



- Position rubber seal
 (1) between the body
 and the sink-top.
- Fit the fiber seal (2), washer (3) and tighten nut (4).
- 3) Screw the flexible hose
 (5) onto spray head (6)
 not forgetting the seal.
 4) Insert flexible hose
- 5) Slide counterweight (8) over hose and fix it at bottom of loop.
- 6) Screw the rotary connector (9) on flexible hose not forgetting the seal. Do not twist flexible hose!
 7) Connect the two flexible pipes (10), with their seals in place, to the hot and cold water supply. Turn cold and hot water on and check for fishtnesses.

■■■ Diverter replacement (spray head model)



Strip in numerical order
 Refit in reverse order

■■■ Maintenance on mechanisms (both)

Under normal operating conditions, Franke faucets do not require any maintenance. They are unaffected by scaling or corrosion.

■■■ Mixer cartridge replacement (both)



- shut off the cold and hot
 water inlets
 - 2) undo the screw (1)
 - 3) take off the lever (2)
 - 4) unscrew the cover (3)
- 5) undo the nut (4)
- 6) replace the cartridge (5)
- 7) refit the parts in reverse order
- 8) turn on the water inlets
- 9) check for tightness
- ■■■ Aerator cleaning: if water outlet clogged with stain deposit or impurities, you can unscrew the gerator plate to clean it.